
COMPACT Splicing Connector; for all conductor types; max. 4 mm²; 3-conductor; with levers; transparent housing; Surrounding air temperature: max 85°C (T85); 4,00 mm²; transparent



www.wago.com/221-413



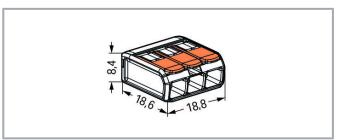

Item description

Your Benefits:

- Ease of use pull the lever up, insert a conductor and push the lever back down
- Available as 2-, 3- and 5-wire connectors
- Easily terminate conductors from 0.14 to 4 mm²
- Connect solid, stranded and fine-stranded conductors

Subject to changes. Please also observe the further product documentation!

WAGO GmbH & Co. KG Hansastr. 27 32423 Minden

Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com

www.wago.com/221-413



- Time savings for installers and device manufacturers
- Quickly install devices with higher levels of power consumption
- Safely install long cable runs with larger conductor cross sections
- Mounting carrier for installation conforms to standards
- Custom carriers are possible

Data Notes

Safety information 1 in grounded power lines

Electrical data

Ratings per IEC/EN

| Ratings per | EN 60664 |
|----------------------------|---|
| Nominal voltage (II/2) | 450 V |
| Rated surge voltage (II/2) | 4 kV |
| Rated current | 32 A |
| Legend (ratings) | (II / 2) Overvoltage category II / Pollution degree 2 |

Ratings per UL

| Approvals per | UL 486C |
|--------------------------------|---------|
| Rated voltage UL (Use Group C) | 600 V |
| Rated current UL (Use Group C) | 20 A |

Connection data

| Total number of connection points | 3 |
|-----------------------------------|---|
| Total number of potentials | 1 |

Connection 1

| Actuation type Lever Connectable conductor materials Copper Nominal cross-section 4 mm² | |
|---|--|
| | |
| Nominal cross-section 4 mm ² | |
| | |
| Solid conductor 0.2 4 mm² / 24 12 AWG | |
| Stranded conductor 0.2 4 mm² / 24 12 AWG | |
| Fine-stranded conductor 0.14 4 mm² / 24 12 AWG | |

 $\label{thm:continuity} \textbf{Subject to changes. Please also observe the further product documentation!}$

WAGO GmbH & Co. KG

Hansastr. 27 32423 Minden

Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com

www.wago.com/221-413



| Strip length | 11 mm / 0.43 inch |
|------------------|-------------------|
| Wiring direction | Side-entry wiring |

Physical data

| Width | 18.8 mm / 0.74 inch |
|--------|----------------------|
| Height | 8.6 mm / 0.327 inch |
| Depth | 18.8 mm / 0.732 inch |

Material data

| Color | transparent |
|-----------------------------|-------------|
| Flammability class per UL94 | V2 |
| Fire load | 0.048 MJ |
| Color of actuator | orange |
| Weight | 2.5 g |
| | |

Environmental requirements

| Surrounding air temperature (operation) | 85 °C |
|---|--------|
| Continuous operating temperature | 105 °C |
| Temperature marking per EN 60998 | T85 |

Commercial data

| Product Group | 7 (Push Wire Conn.) |
|-----------------------|---------------------|
| PU (SPU) | 500 (50) Stück |
| Packaging type | box |
| Country of origin | DE |
| GTIN | 4050821808442 |
| Customs tariff number | 85369010000 |

Approvals / Certificates

Country specific Approvals

| Logo | Approval | Additional Approval Text | Certificate name |
|------|------------------------------|--------------------------|------------------|
| CCA | CCA DEKRA Certification B.V. | EN 60998 | NTR NL- 7827 |
| | KEMA/KEUR | EN 60998 | 71- |

Subject to changes. Please also observe the further product documentation!

WAGO GmbH & Co. KG

Hansastr. 27 32423 Minden

Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com Do you have any questions about our products?

We are always happy to take your call at +49 (571) 887-44222.





DEKRA Certification B.V.

113253

| ~ : . | | | |
|--------------|-----|------|----|
| Ship | aga | rova | IS |

| Logo | Approval | Additional Approval Text | Certificate name |
|---------------------------------|--|--------------------------|--------------------------|
| ABS. | ABS American Bureau of Shipping | - | 18- HG1755093- PDA |
| | DNV GL Det Norske Veritas, Germanischer Lloyd | EN 60998 | TAE000015T |
| DO LR THE AMERICAL SCHOOL | LR Lloyds Register | EN 60998 | 04/20013 (E8) |
| UL-Approvals | 3 | | Certificate |

| | | | Certificate |
|----------|-------------------------------|--------------------------|-------------|
| Logo | Approval | Additional Approval Text | name |
| • | UL | UL 486C | E69654 |
| c(UL) us | UL International Germany GmbH | | |

Optional accessories

| - 1. | ım | nn | rc |
|------|----|----|----|

WIRE CONNECTOR 667F

| Jumpers Jumper | | |
|-------------------|---|----------------------|
| - Cumper | | |
| | Item no.: 221-941 Jumper; for conductor entry; 2-way; insulated; dark gray | www.wago.com/221-941 |
| 11 | Item no.: 221-941/000-006 | www.wago.com/221-941 |
| | Jumper; for conductor entry; 2-way; insulated; blue | /000-006 |
| | Item no.: 221-942 Jumper; for conductor entry; 2-way; insulated; dark gray | www.wago.com/221-942 |

Subject to changes. Please also observe the further product documentation!

WAGO GmbH & Co. KG Hansastr. 27

32423 Minden

Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com

www.wago.com/221-413





Item no.: 221-942/000-006

Jumper; for conductor entry; 2-way; insulated; blue

www.wago.com/221-942 /000-006

| Mounting ada | ipter | |
|--------------|---|----------------------------------|
| Mounting a | ccessories | |
| | Item no.: 221-500 Mounting carrier; 221 Series - 4 mm²; for DIN-35 rail mounting/screw mounting; orange | www.wago.com/221-500 |
| | Item no.: 221-503 Mounting carrier; for 3-conductor terminal blocks; 221 Series - 4 mm²; for screw mounting; white | www.wago.com/221-503 |
| | Item no.: 221-503/000-004 Mounting carrier; for 3-conductor terminal blocks; 221 Series - 4 mm²; for screw mounting; black | www.wago.com/221-503 /000-004 |
| | Item no.: 221-513/000-004 Mounting carrier; for 3-conductor terminal blocks; 221 Series - 4 mm²; with snap-in mounting foot for horizontal mounting; black | www.wago.com/221-513 /000-004 |
| | Item no.: 221-513 Mounting carrier; for 3-conductor terminal blocks; 221 Series - 4 mm²; with snap-in mounting foot for horizontal mounting; white | www.wago.com/221-513 |
| | Item no.: 221-523/000-004 Mounting carrier; for 3-conductor terminal blocks; 221 Series - 4 mm²; with snap-in mounting foot for vertical mounting; black | www.wago.com/221-523 /000-004 |
| | Item no.: 221-523 Mounting carrier; for 3-conductor terminal blocks; 221 Series - 4 mm²; with snap-in mounting foot for vertical mounting; white | www.wago.com/221-523 |
| the H life | Item no.: 221-500/000-006 Mounting carrier; 221 Series - 4 mm²; for DIN-35 rail mounting/screw mounting; blue | www.wago.com/221-500 /000-006 |
| 100 H 100 | Item no.: 221-500/000-053 | www.wago.com/221-500 |

Downloads Documentation

Bid Text

Mounting carrier; 221 Series - 4 mm²; for DIN-35 rail mounting/screw mounting; dark gray-yellow

 $\label{thm:continuity} \textbf{Subject to changes. Please also observe the further product documentation!}$

WAGO GmbH & Co. KG Hansastr. 27

32423 Minden

Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com Do you have any questions about our products? We are always happy to take your call at +49 (571) 887-44222.

/000-053

www.wago.com/221-413



| 221-413 docx - Datei | 23/01/2019 | docx 15.7 kB | Download |
|-------------------------|------------|-----------------|----------|
| Additional Information | | | |
| Technical explanations | | pdf 2.2 MB | Download |

CAD/CAE-Data

CAE data

| EPLAN Data Portal 221-413 | URL | Download |
|---------------------------|-----|----------|
| ZUKEN Portal 221-413 | URL | Download |
| CAD data | | |
| 2D/3D Models 221-413 | URL | Download |

Environmental Product Compliance

Compliance Search

Environmental Product Compliance 221-413

COMPACT Splicing Connector; for all conductor types; max. 4 mm²; 3-conductor; with levers; transparent housing; Surrounding air temperature: max 85°C (T85); 4,00 mm²; transparent

URL Download

Installation Notes

Conductor termination


 $\label{thm:continuity} \textbf{Subject to changes. Please also observe the further product documentation!}$

WAGO GmbH & Co. KG Hansastr. 27 32423 Minden


Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com

www.wago.com/221-413




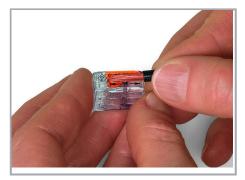

Strip conductor to 11 mm (0.43 inch).

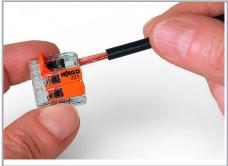


Termination: Lift the lever to open the clamping unit and insert a stripped conductor.

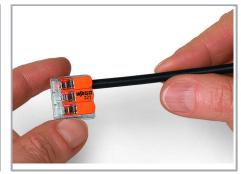

Then, lower the lever to close the clamp.

Application

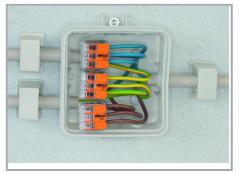

Wiring fine-stranded conductors in junction boxes.



Custom low-voltage lighting system



Lighting distribution in a ceiling canopy



Pendant light connection in a suspended ceiling

 $\label{thm:condition} \textbf{Subject to changes. Please also observe the further product documentation!}$

WAGO GmbH & Co. KG Hansastr. 27 32423 Minden

Phone: +49571 887-0 | Fax: +49571 887-169 Email: info.de@wago.com | Web: www.wago.com