

Features

• Temperature range: -55°C ~ +150°C

• Temperature accuracy: ±0.5°C (-40°C ~ +125°C)

• Supply voltage range: 1.4V ~ 5.5V

• Low quiescent current:

Normal operation: ≤10µA (4Hz)

Shutdown mode: ≤1µA


• Resolution: 12bits, 0.0625°C

Digital output: SMBus[™] and I²C interface

compatibility

Applications

- Portable and battery-powered applications
- · Power-supply temperature monitoring
- Computer peripheral thermal protection
- Notebook computers
- · Battery management
- Office machines
- Thermostat controls
- Electromechanical device temperatures
- General temperature measurements:
 - Industrial controls
 - Test equipment
 - Medical instrumentation

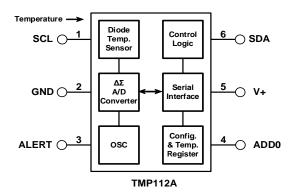

Description


The TMP112A is a digital temperature sensor with high-accuracy, low-power, and NTC/PTC thermistor replacements. It can be used for extended temperature measurement in communication, computer, consumer electronics, environmental, industrial and instrumentation applications. The TMP112A provides $\leq \pm 0.5^{\circ}$ C temperature accuracy with good temperature linearity over the normal operating range of -40°C to +125°C. The TMP112A can provide extended temperature measurement mode, extending the temperature measurement range from -55°Cto +150°C.

The rated working voltage range of the TMP112A is $1.4V\sim5.5V$, and the maximum quiescent current in the entire working rage is $10\mu\text{A}$ (temperature measurement frequency 4Hz). The on-chip 12-bit ADC offers resolutions down to 0.0625°C .

The TMP112A adopts SOT563 is compatible with SMBus and I²C interface, and allows up to four devices on one bus. The device also features an SMBus alert function.



Pin Configuration and Functions

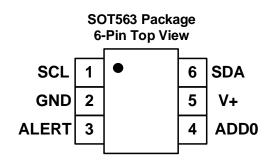

Pin Functions

PIN		DESCRIPTION
NO.	NAME	DESCRIPTION
1	SCL	Serial clock. Open-drain output, requires a pull-up resistor.
2	GND	Ground.
3	ALERT	Over temperature alert. Open-drain output, requires a pull-up resistor.
4	ADD0	Address select. Connect to V+, GND, SCL or SDA.
5	V+	Supply voltage, 1.4V to 5.5V.
6	SDA	Serial data input. Open-drain output, requires a pull-up resistor.



Specifications

Absolute Maximum Ratings

	MIN	MAX	UNIT	
Supply Voltage, V+		6	V	
Voltage at SCL, SDA, and ADD0	-0.5	6	V	
Voltage at ALEDT	0.5	((V+)+0.3)	V	
Voltage at ALER1	y Voltage, V+ CL, SDA, and ADD0 -0.5 ge at ALERT -0.5 ng Temperature -55 nn Temperature	and ≤5.5	V	
Operating Temperature	-55	160	°C	
Junction Temperature		150	°C	
Storage Temperature	-60	150	°C	

Over opera ting free -air temp erature range (unless of herwise note d) . Stresses beyond those listed under Absolute Maximum Ratings may cause permanent damage to the device.

ESD Ratings

		Value	UNIT
Electrostatic	Human Body Mode (HBM), per ANSI/ESDA/JEDEC JS-001	±5000	٧
Discharge, V _{ESD}	Machine Mode (MM), per JEDEC-STD Classification	300	V

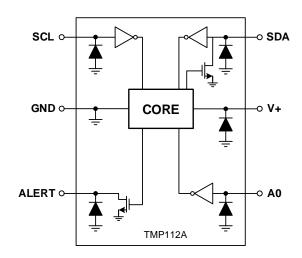


Figure 2. TMP112A Internal ESD Equivalent Circuit

Recommended Operating Conditions

	MIN	NOM	MAX	UNIT
Supply Voltage V+	1.4	3.3	5.5	V
Operating Temperature T _A	-50		150	°C

Over operating free-air temperature range (unless otherwise noted).



Electrical Characteristics

Electrical characteristics of devices at $T_A = +25$ °C and V+ = 1.4 V to 3.6 V (unless otherwise noted).

PARAMETER	TEST CONDITONS	MIN	TYP	MAX	UNIT		
Operating Temperature Range		-40		125	°C		
Operating reinperature Kange	Extended mode	-55		150	°C		
	+25°C, V+ = 3.3V		±0.1	±0.5	°C		
Accuracy (Temperature Error)	0°C to +65°C, V+ = 3.3V		±0.25	±0.5	°C		
	-40°C to +125°C		±0.5	±1	°C		
DC Power Supply Sensitivity	-40°C to +125°C		0.0625	±0.25	°C/V		
Resolution			0.0625		°C		
Resolution			12		bits		
Conversion Time			26	35	ms		
Conversion Modes	CR1 = 0, CR0 = 0		0.25		conv/s		
	CR1 = 0, CR0 = 1		1				
	CR1 = 1, CR0 = 0 (default)		4				
	CR1 = 1, CR0 = 1		8				
Timeout Time			30	40	ms		
Communication Frequency	Fast mode	0.001		0.4	MHz		
Communication Frequency	High-speed mode	0.001		2.75	IVII IZ		
Power Supply Voltage		1.4	3.3	5.5	٧		
	Serial bus inactive, CR1=1,CR0=0 (default)		7	10			
Average Quiescent Current, IQ	Serial bus active, SCL frequency=400 kHz		15		μΑ		
	Serial bus active, SCL frequency=2.75 MHz		85				
	Serial bus inactive		0.5	1			
Shutdown Current, I _{SD}	Serial bus active, SCL frequency=400 kHz		10		μΑ		
	Serial bus active, SCL frequency=2.75 MHz		80				



Detailed Description

and CR0.

Device Functional Modes

Continuous Conversion Mode

The default working mode of TMP112A is continuous conversion mode, and the typical conversion time is 26ms. During continuous conversion mode, the ADC performs continuous temperature conversions and stores each results to the temperature register, overwriting the result from the previous conversion. The conversion rate bits, CR1 and CR0, configure the TMP112A for conversion rates of 0.25Hz, 1Hz, 4Hz, or 8Hz. The conversion rate can be changed by configuring CR1 and CR0, the TMP112A makes a conversion and then powers down and waits for the appropriate delay set by CR1 and CR0, as shown in Figure 3. Table 1 lists the settings for CR1

CR1	CR0	CONVERSION RATE
0	0	0.25Hz
0	1	1Hz
1	0	4Hz (default)
1	1	8Hz

Table 1. Conversion Rate Settings

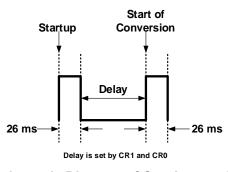


Figure 3. Schematic Diagram of Continuous Conversion

Extended Mode

The temperature measurement range of TMP112A is -40°C to +125°C in normal temperature measurement mode. By setting the EM bit in the configuration register to1, the TMP112A can enter the extended temperature measurement mode. Extended mode (EM = 1) allows measurement of temperatures above 128°C by configuring the temperature register and the temperature limit registers for 13-bit data format.

The read-only temperature register in TMP112A uses two bytes to store the temperature measurement results, as shown in Table 8 and Table 9. Byte 1 is the MSB, byte 2 is the LSB, and the upper 12 bits (13 bits in extended mode) are used to indicate the temperature. It is not necessary to read the LSB when the temperature information of the LSB is not required.

The data format of the TMP112A temperature measurement results is listed in Table 2 and Table 3, where 1LSB = 0.0625°C, and negative numbers are expressed in binary two's complement format. When powered on or reset, the temperature register of the TMP112A will be set to 00h until the next temperature conversion is complete. Unused bits in the temperature register always read as 0 (not shown in the table below).



Table 2. 12-bit Temperature Data Format in Normal Temperature Measurement Mode

TEMPERATURE (°C)	DIGITAL OUPUT (BINARY)	HEX
128	0111 1111 1111	7FF
127.9375	0111 1111 1111	7FF
100	0110 0100 0000	640
80	0101 0000 0000	500
75	0100 1011 0000	4B0
50	0011 0010 0000	320
25	0001 1001 0000	190
0.25	0000 0000 0100	004
0	0000 0000 0000	000
-0.25	1111 1111 1100	FFC
-25	1110 0111 0000	E70
– 55	1100 1001 0000	C90

Table 3. 13-bit Temperature Data Format in Extended Temperature Measurement Mode

TEMPERATURE (°C)	DIGITAL OUPUT (BINARY)	HEX
150	0 1001 0110 0000	0960
128	0 1000 0000 0000	0800
127.9375	0 0111 1111 1111	07FF
100	0 0110 0100 0000	0640
80	0 0101 0000 0000	0500
75	0 0100 1011 0000	04B0
50	0 0011 0010 0000	0320
25	0 0001 1001 0000	0190
0.25	0 0000 0000 0100	0004
0	0 0000 0000 0000	0000
-0.25	1 1111 1111 1100	1FFC
-25	1 1110 0111 0000	1E70
– 55	1 1100 1001 0000	1C90

Shutdown Mode

Shutdown mode of the TMP112A device allows the user to conserve power by shutting down all device circuitry except the serial interface, thereby reducing the current of the TMP112A to less than 0.5µA (typical value). Shutdown mode is initiated when the SD bit in the configuration register is set to 1; after configuring the registers in this way, the TMP112A will shut down after completing the current conversion. To exit shutdown mode, write SD bit to 0, the TMP112A will re-enter continuous conversion mode.




One-Shot Mode

The TMP112A features a one-shot mode. When the TMP112A is in shutdown mode, writing 1 to the OS bit starts a single temperature conversion. During the conversion, the OS bit reads 0. The TMP112A returns to the shutdown state at the completion of the single conversion, the OS bit reads 1. This feature is useful for reducing power consumption when continuous temperature monitoring is not required.

Since the TMP112A only needs 26ms for a single temperature measurement (typical value), it can achieve a higher conversion rate through this mode. When using one-shot mode, 30 or more conversions per second are possible.

ALERT

The TMP112A has a temperature alarm function, by writing the TM bit in the configuration register as 0 or 1, the TMP112A can be configured as comparator mode or interrupt mode to achieve different alarm functions.

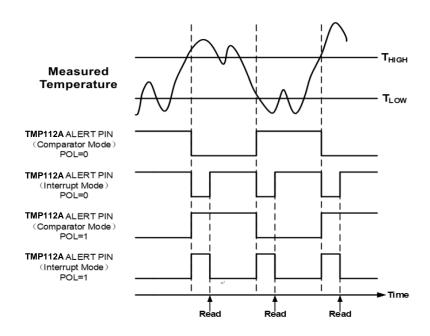

In comparison mode (TM=0), when the number of times the temperature measurement result continuously equals or exceeds the temperature upper limit register value T_{HIGH} reaches the value defined by the F1/F0 bits in the configuration register (as shown in Table 4), the ALERT pin will be activated. The ALERT pin will remain active until the number of times the temperature measurement result is continuously lower than the temperature lower limit register value T_{LOW} reaches the value defined by F1/F0.



In interrupt mode (TM=1), the ALERT pin will be activated when the temperature measurement result equals or exceeds Thigh continuously for a number of times to the value defined by F1/F0 (as shown in Table 4). The ALERT pin remains active until it is cleared by one of three events: a read of any register, a successful SMBus alert response, or a shutdown command. After the ALERT pin is cleared, the device starts to compare temperature readings with the TLOW. The ALERT pin becomes active again only when the temperature drops below TLOW for a consecutive number of conversions as set by F1/F0 bits. The ALERT pin remains active until cleared by any of the same three clearing events. The user can also reset the TMP112A to clear the ALERT pin state by using the global response reset command (General Call). This operation also resets other internal registers in the TMP112A and returns the device to compare mode (TM=0). Table 4 shows the specific configuration of the F1/F0 bits.

 F1
 F0
 REQUIRED NUMBER (TIMES)

 0
 0
 1 (Default)

 0
 1
 2

 1
 0
 4

Table 4. Number of Over-Temperature Required to Activate the ALERT Pin

The polarity bit (POL) in the configuration register allows the user to adjust the polarity of the ALERT pin output. If the POL bit is set to 0 (default), the ALERT pin becomes active low. When POL bit is set to 1, the ALERT pin becomes active high. The above situations are shown in Figure 4.

Serial Interface

Bus Overview

The TMP112A is compatible with SMBus and I²C interfaces. In the SUMBus protocol, the device that initiates the transfer is called a master, and the devices controlled by the master are slaves. The bus must be controlled by a master device that generates the serial clock (SCL), controls the bus access, and generates the START and STOP conditions. To address a specific device, a START condition is initiated, indicated by pulling the data line (SDA) from a high- to low-logic level when the SCL pin is high. All slaves on the bus receive the 8-bits slave address on the rising edge of the clock, and the last bit indicates whether a read or write operation is intended. During the ninth clock pulse,

the addressed slave generates an acknowledge and pulls the SDA pin low to respond to the master. A data transfer is then initiated and sent over eight clock pulses followed by an acknowledge bit. When all data are transferred, the master generate a STOP signal to end the communication by pulling SDA from low to high when SCL is high.

During the data transfer, the SDA pin must remain stable when the SCL pin is high because any change in the SDA pin when the SCL pin is high is interpreted as a START or STOP signal.

SCL



Serial Bus Address

To communicate with the TMP112A, the master must first address slave devices through an address byte. The address byte has seven address bits and a read-write (R/W) bit that indicates the intent of executing a read or write operation. The TMP112A features an address pin to allow up to four devices to be addressed on a single bus. Table 5 shows the connection mode of the ADD0 pins corresponding to each slave address.

 DEVICE TWO-WIRE ADDRESS
 ADD0 PIN CONNECTION

 1001000
 GND

 1001001
 V+

 1001010
 SDA

Table 5. Address Pin and Slave Addresses

6.2.3 Writing and Reading Operation

1001011

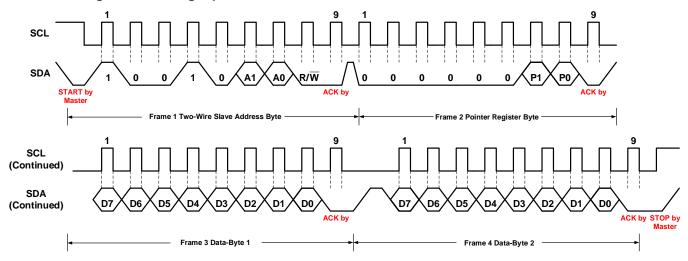
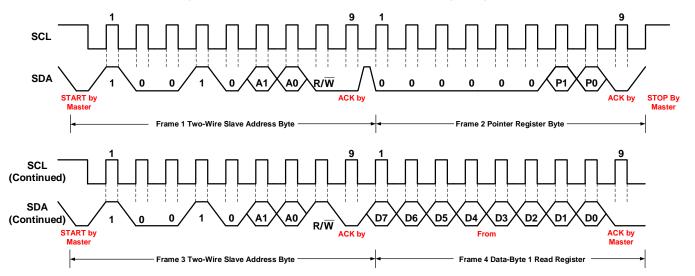


Figure 5. Two-wire Write Command Timing Diagram





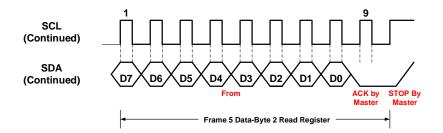


Figure 6. Two-wire Read Command Timing Diagram

When writing data to the TMP112A, after the slave address byte is sent, accessing a particular register on the TMP112A is accomplished by writing the appropriate value to the pointer register. Every write operation to the TMP112A requires a value for the pointer register.

When reading from the TMP112A device, after the slave address byte is sent, the corresponding pointer register byte also needs to be sent. Unlike the write operation, if the user need to repeatedly read data from the same register, it is not required to send the pointer register byte separately each time, the last value stored in the pointer register will be read by the device automatically; to change the register pointer for a read operation, a new value must be written to the pointer register. The action is accomplished by issuing a slave-address byte with the R/W bit low, followed by the pointer register byte. The master can then generate a START condition and send the slave address byte with the R/W bit high to initiate the read command.

Register bytes are sent with the MSB first, followed by the LSB. Figure 5 and Figure 6 show schematic diagrams of the above read and write operations.

SMBus Alert Function

The TMP112A supports the SMBus alert function. When the TMP112A operates in interrupt mode (TM=1), the master can send out and SMBus ALERT command (19h) to the bus. If the ALERT pin is active, the device acknowledges the SMBus ALERT command and responds by returning the slave address. The eighth bit (LSB) of the slave address byte indicates if the alert condition is caused by the temperature exceeding T_{HIGH} or falling below T_{LOW}. This bit is equal to POL if the temperature is greater than or equal to T_{HIGH}; this bit is equal to POL if the temperature is less than T_{LOW}.

If multiple devices on the bus respond to the SMBus ALERT command, the bus will return the lowest two-wire address. The TMP112A ALERT pin becomes inactive at the completion of the SMBus ALERT command; the ALERT pin of the TMP112A that does not return an address will remain active. Sending the SMBus ALERT command again can continue to clear the ALERT pin of the TMP112A with the current lowest address. The above process is detailed in Figure 7.



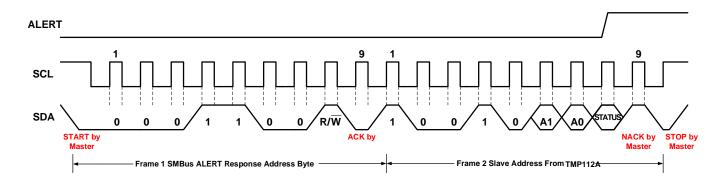


Figure 7. SMBus Alert Timing Diagram

General Call Reset

The TMP112A responds to the two-wire general call address 00h. The device acknowledges the general call address and responds to commands in the second byte. If the second byte is 06h, the TMP112A resets the internal registers to the power-up reset values, and aborts the current temperature conversion. If the second byte is other value, the TMP112A will not respond.

High-Speed Mode

For the two-wire bus to operate at frequencies above 400kHz, the host device must issue a High-Speed mode host code (0000 1xxxb) as the first byte after a START condition to switch the bus to high-speed operation. The TMP112A device does not acknowledge this byte, but it does switch the input filters on the SDA and SCL and the output filters on the SDA to operate in High-Speed mode, allowing the bus to transmit data at frequencies up to 2.75MHz. After the High-Speed mode host code is issued, the host transmits a two-wire device address to initiate a data transfer operation. The bus continues to operate in High-Speed mode until a STOP condition occurs on the bus. Upon receiving the STOP condition, the TMP112A switches the input and output filters back to fast-mode operation.

Time-Out Function

The TMP112A resets the serial interface if SCL is held low for 30ms (typical) between a START and STOP condition, the TMP112A releases the SDA bus and waits for a START condition. To avoid activating the Time-Out function, a communication speed of at least 1kHz must be maintained.



Register Descriptions

Pointer Register

Figure 8 shows the internal register structure of the TMP112A device. The 8-bit Pointer Register of the device is used to address a given data register. The Pointer Register uses the two LSBs (see Table 6) to identify which of the data registers must respond to a read or write command. The power-up reset value of P1/P0 is '00'. By default, the TMP112A reads the temperature on power-up.

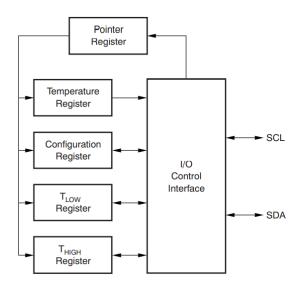


Table 6 lists the pointer address of the registers available in the TMP112A device. During a write command, bytes P2 through P7 must always be 0.

Table 6. Pointer Address

P1	P0	REGISTER
0	0	Temperature Register (Read Only)
0	1	Configuration Register (Read/Write)
1	0	T _{LOW} Register (Read/Write)
1	1	Тнісн Register (Read/Write)

Table 7. Pointer Register Byte

P7	P6	P5	P4	P3	P2	P1	P0
0	0	0	0	0	0	Register Bits	



Temperature Register

The Temperature Register of the TMP112A device is configured as a 12-bit or 13-bit read-only register (setting the EM bit to 0 or 1) that stores the output of the most recent conversion. Two bytes must be read to obtain data and are listed in Table 8 and Table 9. Byte 1 is the most significant byte (MSB), followed by byte 2, the least significant byte (LSB). The T11~T0 bits (T12~T0 bits in extended mode) are used to indicate temperature. Byte 2 does not have to be read if that information is not needed. The D0 bit of byte 2 in the temperature register indicates whether the device is in normal mode (D0=0) or extended mode (D0=1) at this time, which can be used to distinguish the format of the two temperature register data.

Table 8. Byte 1 of Temperature Register

BYTE	D7	D6	D5	D4	D3	D2	D1	D0
1	T11	T10	Т9	Т8	T7	T6	T5	T4
ľ	(T12)	(T11)	(T10)	(T9)	(T8)	(T7)	(T6)	(T5)

Table 9. Byte 2 of Temperature Register

BYTE	D7	D6	D5	D4	D3	D2	D1	D0
1	Т3	T2	T1	T0	0	0	0	0
	(T4)	(T3)	(T2)	(T1)	(T0)	(0)	(0)	(1)

Temperature Limit Register

The temperature limits are stored in the Thigh and TLOW registers in the same format as the temperature result, and can be configured as 12-bit or 13-bit according to the value of the EM bit. Table 10 and Table 11 list the format for the Thigh and TLOW registers, the configuration in extended mode is in brackets. The power-up reset values for Thigh and TLOW are:

• $T_{HIGH} = +80^{\circ}C$; $T_{LOW} = +75^{\circ}C$

Table 10. Byte 1 and 2 of THIGH Register

BYTE	D7	D6	D5	D4	D3	D2	D1	D0
1	H11	H10	H9	Н8	H7	H6	H5	H4
	(H12)	(H11)	(H10)	(H9)	(H8)	(H7)	(H6)	(H5)
2	H3	H2	H1	H0	0	0	0	0
	(H4)	(H3)	(H2)	(H1)	(H0)	(0)	(0)	(0)

Table 11. Byte 1 and 2 of TLOW Register

BYTE	D7	D6	D5	D4	D3	D2	D1	D0
1	L11	L10	L9	L8	L7	L6	L5	L4
	(L12)	(L11)	(L10)	(L9)	(L8)	(L7)	(L6)	(L5)
2	L3	L2	L1	L0	0	0	0	0
	(L4)	(L3)	(L2)	(L1)	(L0)	(0)	(0)	(0)



ConfigurationRegister

The Configuration Register is a 16-bit read/write register used to store bits that control the operational modes of the temperature sensor. Read/write operations are performed MSB first. Table 12 and Table 13 list the format and power-up and reset values of the configuration register.

Table 12. Configuration Register High Byte

BIT	FIELD	DEFAULT	DESCRIPTION	
			One-Shot and Conversion Completion Flag	
7	OS (R)	0	1 = Temperature not converting	
			0 = Temperature is converting	
6	R1 (R)	1	Set to 11 on Power-up	
5	R0 (R)	1	Temperature measurement resolution is 12bits	
			Flag Bit for the Number of Over-Temperature	
4	F1 (R/W)	0	Required to Activate the ALERT Pin	
			00 = 1 time (Default)	
			01 = 2 times	
3	F0 (R/W)	0	10 = 4 times	
			11 = 6 times	
			ALERT Pin Polarity Flag	
2	POL (R/W)	0	1 = ALERT pin is high when activated	
			0 = ALERT pin is low when activated	
			Device Working Mode Flag Bit	
1	TM (R/W)	0	1 = Interrupt mode	
			0 = Comparator mode	
			Shutdown Mode Flag	
0	SD (R/W)	0	1 = Shutdown mode	
			0 = Continuous conversion mode	



Table 13. Configuration Register Low Byte

BIT	FIELD	DEFAULT	DESCRIPTION		
	004 (044)		Continuous Conversion Rate Flag		
7	CR1 (R/W)	1	00 = 0.25Hz		
			01 = 1Hz		
6	CR0 (R/W)	0	10 = 4Hz (Default)		
			11 = 8Hz		
			Alarm Function Fag Bit in Compare Mode		
			When the POL bit equals 0, the AL bit reads as 1		
			until the temperature equals or exceeds T _{HIGH} for the		
			programmed number of consecutive faults, causing the		
			AL bit to read as 0. The AL bit continues to read as 0		
5	AL (R)	1	until the temperature falls below T _{LOW} for the		
			programmed number of consecutive faults, when it		
			again reads as 1. If POL=1, the behavior of the AL bit is		
			the opposite of the above.		
			The status of the TM bit does not affect the status		
			of the AL bit.		
			Extended Mode Flag		
4	EM (R/W)	0	1 = Extended mode		
			0 = Normal mode		
3	0	0	1		
2	0	0	1		
1	0	0	1		
0	0	0	I		



Application and Implementation

NOTE

The following contents are the precautions for TMP112A recommended by UTD Semiconductor Co.,Limited. in practical applications. Customers are responsible for determining suitability of components for their purposes. Customers should validate and test their design implementation to confirm system functionality.


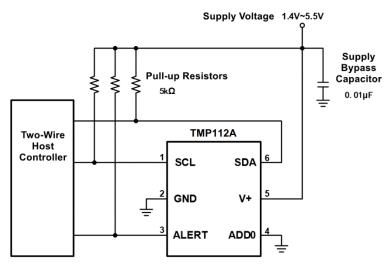


Figure 9. Typical Connections of the TMP112A

The TMP112A device requires pull-up resistors on the SCL, SDA, and ALERT pins, as shown in Figure 9, the recommended value for the pull-up resistors is $5k\Omega$. In some applications the pull-up resistor can be lower or higher than $5k\Omega$ but must not exceed 3mA of current on any of those pins.


The TMP112A device is a very low-power device and generates very low noise on the supply bus. Applying an RC filter to the V+ pin of the TMP112A device can further reduce any noise that the device might propagate to other components. R_F in Figure 10 must be less than $5k\Omega$ and C_F must be greater than 10nF.

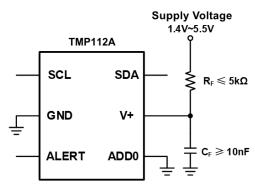

Place the device in close proximity to the heat source that must be monitored, with a proper layout for good thermal coupling. This placement ensures that temperature changes are captured within the shortest possible time interval. To maintain accuracy in applications that require air or surface temperature measurement, take care to isolate the package and leads from ambient air temperature. A thermally-conductive adhesive is helpful in achieving accurate surface temperature measurement.




Encapsulating Information SOT-563

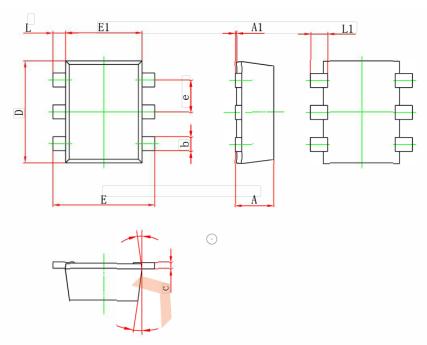

Cumbal	Dimensions I	In Millimeters	Dimensions in inches		
Symbol	Min.	Max.	Min.	Max.	
A	0. 525	0.600	0.021	0. 024	
A1	0.000	0.050	0.000	0.002	
е	0. 450	0. 550	0.018	0. 022	
С	0.090	0. 160	0.004	0.006	
D	1. 500	1. 700	0.059	0.067	
b	0. 170	0. 270	0.007	0.011	
E1	1. 100	1. 300	0.043	0.051	
Е	1. 500	1. 700	0.059	0.067	
L	0. 100	0. 300	0.004	0.012	
L1	0. 200	0. 400	0.008	0.016	
θ	7 01	REF.	7 °REF.		

Marking



ORDERING INFORMATION

Order code	Package	Baseqty	Deliverymode
UMW TMP112AIDRLR	SOT-563	3000	Tape and reel