



SPECIFICATION FOR APPROVAL

CUSTOMER: Platan

EVERCOOL MODEL NO: EC6020H12S

CUSTOMER MODEL NO: EC6020H12S

DESCRIPTION: DC12V FAN

APPROVED BY (AUTHORISED)	APPROVED
	Alex
	CHECKED
	Xiongwei
	DRAWN
	Chenjie
	SALES
	Serene

* Please confirm your acceptance by return fax or mail.

SPEC NO	ISSUE DATE	EDITION	REVISED DATE
20211018G04	2021/10/18	A0(F2)	2021/10/18

THE PRODUCTION ACCORD WITH EUROPE UNION ROHS STANDARD

EVERCOOL THERMAL CO., LTD

**NO. 123-8, HSING DE RD., SAN-CHUNG CITY,
TAIPEI HSIEN, TAIWAN, R.O.C.**

TEL: 886-2-8512-2889 FAX: 886-2-8512-2890

[URL:www.evercool.com.tw](http://www.evercool.com.tw)

[EMAIL: coolest@ms14.hinet.net](mailto:coolest@ms14.hinet.net)

I. GENERAL SPECIFICATION

Item	Specification
1.Part NO.	EC6020H12S
2.Outline Dimension	60*60*20
3.Rated Voltage	12 VDC
4.Starting Voltage	7 VDC
5.Operating Voltage Range	7 VDC~ 13.8 VDC
6.Rated Current*	0.21 A
7.Rated Power Consumption*	2.52 W
8.Rated Speed*	4500 RPM±15%
9.Max. Airflow**	16.73 CFM(ft3/min)
10.Max. Static Pressure**	0.15 In-H2O
11.Noise Level***	<35.2 dB(A)
12.Life Expectancy	25000 hrs at 25°C
13.No of Polarity	4 Poles
14.Direction of Rotation	Counter-Clockwise

Noted:

***Input Current Speed Power Consumption**

Measured after continuous 30 minutes
operation at rated voltage in free air
at ambient temperature of 25 °C, 65% relative humidity

****Performance**

Measured with use of double chamber. The value
are recorded when the fan speed is stabilized
at rated voltage.

*****Noise Level**

Measured at rated voltage in a semi-anechoic chamber
with background noise below than 20 dB(A).
The measuring distance is in one meter from microphone
to inlet of the fan.

II. ELECTRICAL SPECIFICATION

Item		Specification
1.Polarity Protection	✓ YES	Be capable of endurance when Vcc & GRD are exchanged
	NO	
2.Auto restart	YES	Locked motor protection
	✓ NO	
3.Insulation Resistance		10MΩ/b/w unshielded wire and frame at 500 VDC/min
4.Dielectric Strength		5Ma Max./Measured b/w lead wire and frame at 500VAC/min

III. MAIN MATERIALS / PARTS SPECIFICATION

Item		Specification				
1.Materials of Frame		Thermoplastic PBT of UL 94V-0(BK)				
2.Materials of Fan Blade						
3.Bobbin						
4.Bearing		Dual ball bearing				
		1 ball & 1 sleeve bearing				
	✓	Sleeve bearing				
		EL bearing				
5.Lead wire	✓	Red (+)	UL#	2468	28	AWG
	✓	Black (-)	UL#	2468	28	AWG

6.Connector		Nopin 2P				


IV. ENVIRONMENT SPECIFICATION

Item	Specification
1.Operation Temperature	-10℃~+70℃/66%(RH), high / low temperature test for 24 hours, temperature change: 30℃/hours.
2.Storage Temperature	-40℃~+70℃/66%(RH), high / low temperature test for 24 hours, temperature change: 30℃/hours.


V. DROPPING TEST

Prepared in minimum packing condition, fan will withstand one drop each on three surfaces from 30 cm height onto a 10mm thick hard wooden board.


VI. LABEL MARKING

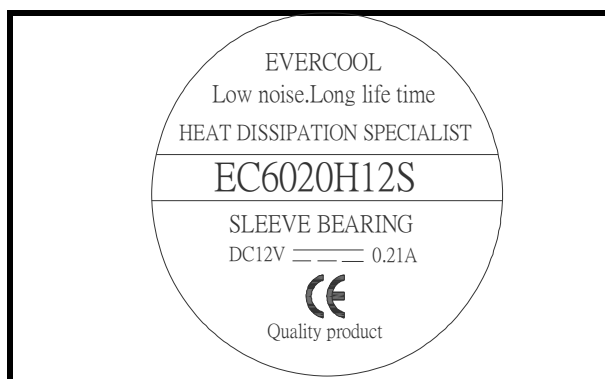

VII. OUTLINE DIMENSION

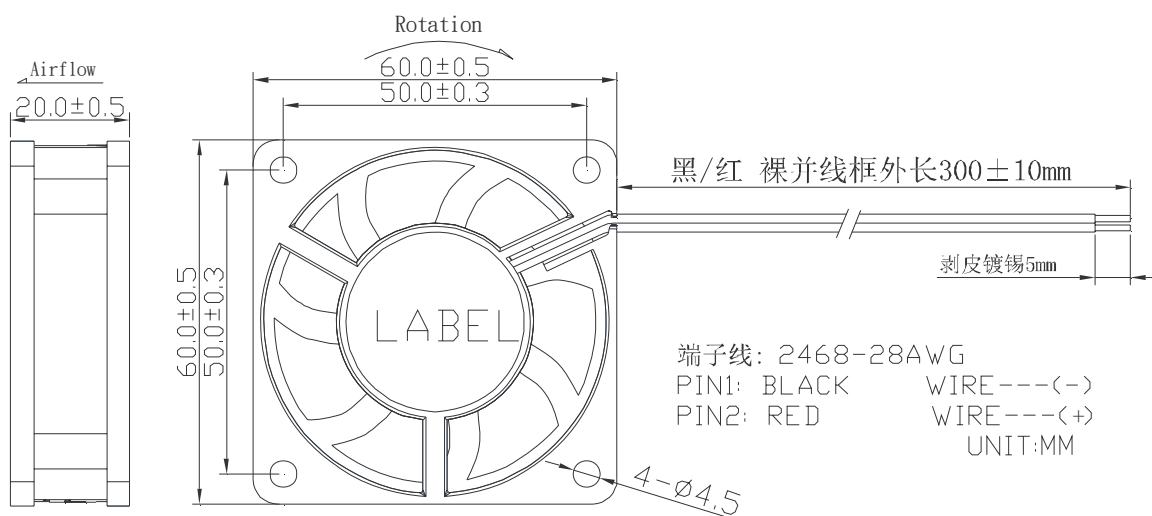

VIII. P/Q Performance

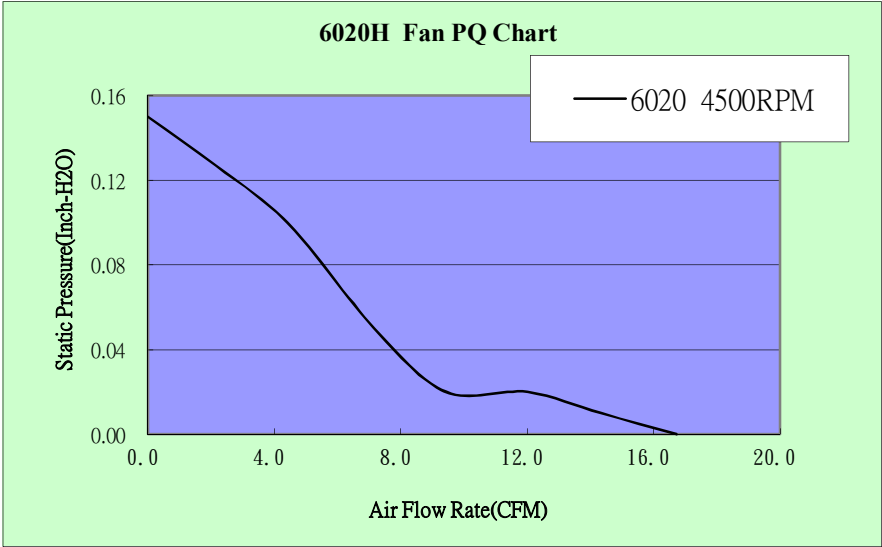

	Q(cfm)	Ps(InchH2o)
1	0.000	0.150
2	1.860	0.130
3	4.408	0.100
4	7.164	0.050
5	9.437	0.020
6	12.010	0.020
7	14.335	0.010
8	16.727	0.000