


Bipolar, Latching, and Unipolar Hall-effect Digital Position Sensor ICs: SS400 Series, SS500 Series

32320997

Issue B

Datasheet

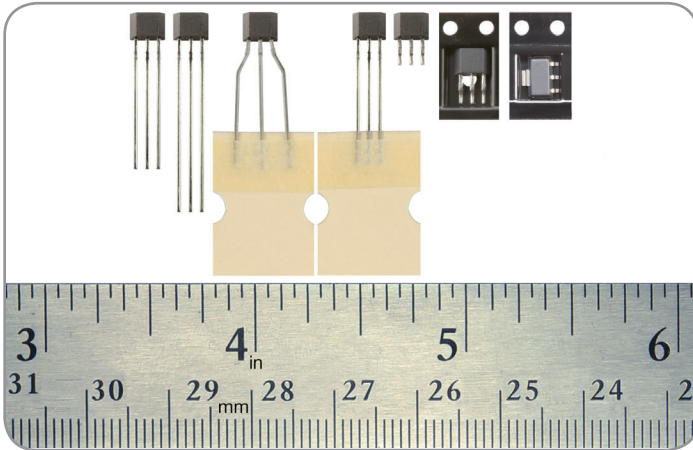

DESCRIPTION

The SS400 Series and SS500 Series are small and versatile digital Hall-effect devices that are operated by the magnetic field from a permanent magnet or an electromagnet, and are designed to respond to alternating North and South poles, or to a South pole only. They are available in bipolar, latching or unipolar magnetics. On-board regulation provides stable operation over a 3.8 Vdc to 30 Vdc supply voltage range. These sensors are capable of continuous 20 mA sinking output and may be cycled as high as 50 mA max. The 3.8 V capability allows for use in many potential low voltage applications. The digital, open collector sinking-type output is easily interfaced with a wide variety of electronic circuits. To provide reliable products and consistent quality, the SS400 Series products are tested at both 25°C [75°F] and 125°C [257°F]. All catalog listings are qualified for operation up to 150°C [302°F]. For design flexibility, these product are available in the following package styles:

- **SS400 Series:** Flat TO-92-style:
 - **SS4XX:** Straight standard leads, bulk pack
 - **SS4XX-L:** Straight long leads, bulk pack
 - **SS4XX-T2:** Formed leads, ammopack tape-in-box
 - **SS4XX-T3:** Straight standard leads, ammopack tape-in-box
 - **SS4XX-S:** Surface mount, bulk pack
 - **SS4XX-SP:** Surface mount, pocket tape and reel
- **SS500 Series:** SOT-89B, pocket tape and reel

FEATURES

- Quad Hall IC design minimizes mechanical stress effects
- Temperature-compensated magnetics help provide stable operation over a wide temperature range of -40°C to 150°C [-40°F to 302°F]
- Broad, inclusive supply voltage capability from 3.8 Vdc to 30 Vdc for application flexibility
- Digital, open collector sinking output for easy interfacing with a variety of common electronic circuits
- High sensitivity versions available for potential applications requiring high accuracy or wide gaps
- Bipolar, latching or unipolar magnetics

POTENTIAL APPLICATIONS

- **Industrial:** Speed and RPM (revolutions per minute) sensing, tachometer, counter pickup, flow-rate sensing, brushless dc (direct current) motor commutation, motor and fan control, robotics control
- **Transportation:** Speed and RPM (revolutions per minute) sensing, tachometer, counter pickup, motor and fan control, electric window lift, convertible roof position
- **Medical:** Motor assemblies, medication dispensing control

PORTFOLIO

Other bipolar, latching and unipolar Hall-effect digital sensor ICs include:

- SS360NT, SS360ST, SS360ST-10K, SS460S, SS460S-T2
- VF360NT, VF360ST, VF460S
- SS361RT, SS461R
- SS361CT, SS461C
- SS340RT, SS440R Series
- SS360PT, SS460P, SS460P-T2
- SS311PT, SS411P

Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs:

SS400 Series, SS500 Series

Table 1. Performance Specifications (Applies to both SS400 series and 500 Series, unless otherwise noted.)

Characteristic	Condition	Min.	Typ.	Max.	Unit
Supply voltage (V_s) ¹	—	3.8	—	30	Vdc
Rated sinking current (I_{sink})	—	—	20	—	mA
Current consumption:					
on:					
SS400 Series	$V_s = 30 \text{ Vdc}$, $I_{sink} = 20 \text{ mA}$, $-40^\circ\text{C} < T < 150^\circ\text{C}$, B > operate max.	—	—	10.0	mA
SS500 Series	$V_s = 30 \text{ Vdc}$, $-40^\circ\text{C} < T < 150^\circ\text{C}$, B > operate max.	—	—	10.0	
off:					
SS400 Series	$V_s = 30 \text{ Vdc}$, $I_{sink} = 20 \text{ mA}$, $-40^\circ\text{C} < T < 150^\circ\text{C}$, B > operate max.	—	—	9.0	
SS500 Series	$V_s = 30 \text{ Vdc}$, $I_{sink} = 20 \text{ mA}$, $-40^\circ\text{C} < T < 150^\circ\text{C}$, B > release min.	—	—	10.0	
V_{sat} :					
SS400 Series	$V_s = 3.8 \text{ Vdc}$, $I_{sink} = 20 \text{ mA}$, B > operate max.	—	—	0.4	V
SS500 Series	$V_s = 3.8 \text{ Vdc}$, B > operate max.	—	—	0.4	
Output leakage current:					
SS400 Series	$V_s = 24 \text{ V}$, $V_{out} = 30 \text{ V}$, B < release min.	—	—	0.4	μA
SS500 Series	—	—	—	10.0	
Output switching time:					
rise	$V_s = 12 \text{ V}$, $R_L = 1.6 \text{ k}\Omega$, $C_L = 20 \text{ pF}$, $T = 25^\circ\text{C}$ [77°F]	—	—	1.5	μs
fall	$V_s = 12 \text{ V}$, $R_L = 1.6 \text{ k}\Omega$, $C_L = 20 \text{ pF}$, $T = 25^\circ\text{C}$ [77°F]	—	—	1.5	
Operating temperature	—	-40[-40]	—	150[302]	$^\circ\text{C}$ [$^\circ\text{F}$]
Storage temperature	—	-50[-58]	—	150[302]	$^\circ\text{C}$ [$^\circ\text{F}$]
Soldering temp. and time:					
SS400 Series	wave soldering process: 250°C to 260°C [482°F to 500°F] for 3 s max.				
SS500 Series	infrared reflow process: peak temperature 245°C [473°F] for 10 s max.				

¹For supply voltages above 24 Vdc, a capacitor may be needed between the output and supply pins to ensure proper operation.

NOTICE


These Hall-effect sensor ICs may have an initial output in either the ON or OFF state if powered up with an applied magnetic field in the differential zone (applied magnetic field >Brp and <Bop). Honeywell recommends allowing 10 μs after supply voltage has reached 5 V for the output voltage to stabilize.

NOTICE

The magnetic field strength (Gauss) required to cause the switch to change state (operate and release) will be as specified in the magnetic characteristics. To test the switch against the specified limits, the switch must be placed in a uniform magnetic field.



Figure 1. Circuit Diagram

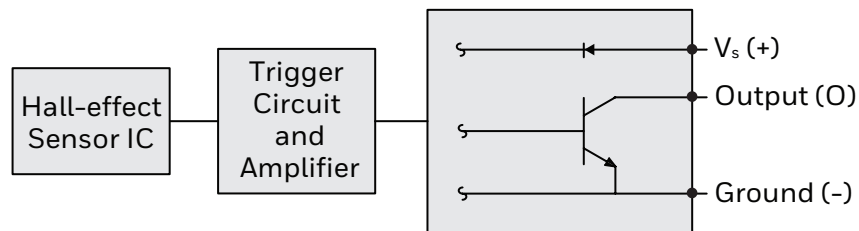

Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs:

SS400 Series, SS500 Series

Table 2. Absolute Maximum Specifications

Characteristic	Min.	Typ.	Max.	Unit
Supply voltage (V_s)	-1	—	30	V
Applied output voltage (V_{out}): SS400 Series SS500 Series (off)	-0.5 —	— —	30 30	V
Output current (I_{sink}): $V_s = -1$ Vdc to 24 Vdc $V_s = 24$ Vdc to 25 Vdc $V_s = 25$ Vdc to 26 Vdc $V_s = 26$ Vdc to 27 Vdc $V_s = 27$ Vdc to 28 Vdc $V_s = 28$ Vdc to 29 Vdc $V_s = 29$ Vdc to 30 Vdc	— — — — — — —	— — — — — — —	50 37 33 28 24 19 15	mA
Magnetic flux	—	—	no limit	Gauss

NOTICE

Absolute maximum ratings are the extreme limits the device will momentarily withstand without damage to the device. Electrical and mechanical characteristics are not guaranteed if the rated voltage and/or currents are exceeded, nor will the device necessarily operate at absolute maximum ratings.

Figure 2. Magnetic Activation


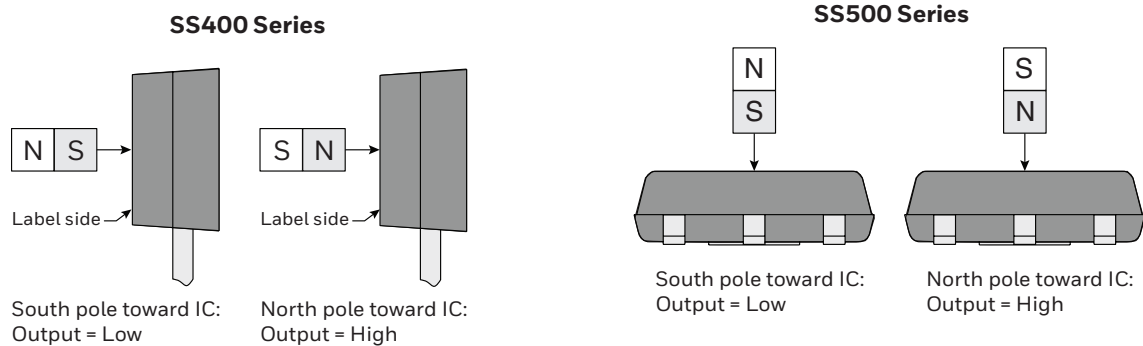


Figure 3. Circuit Diagrams

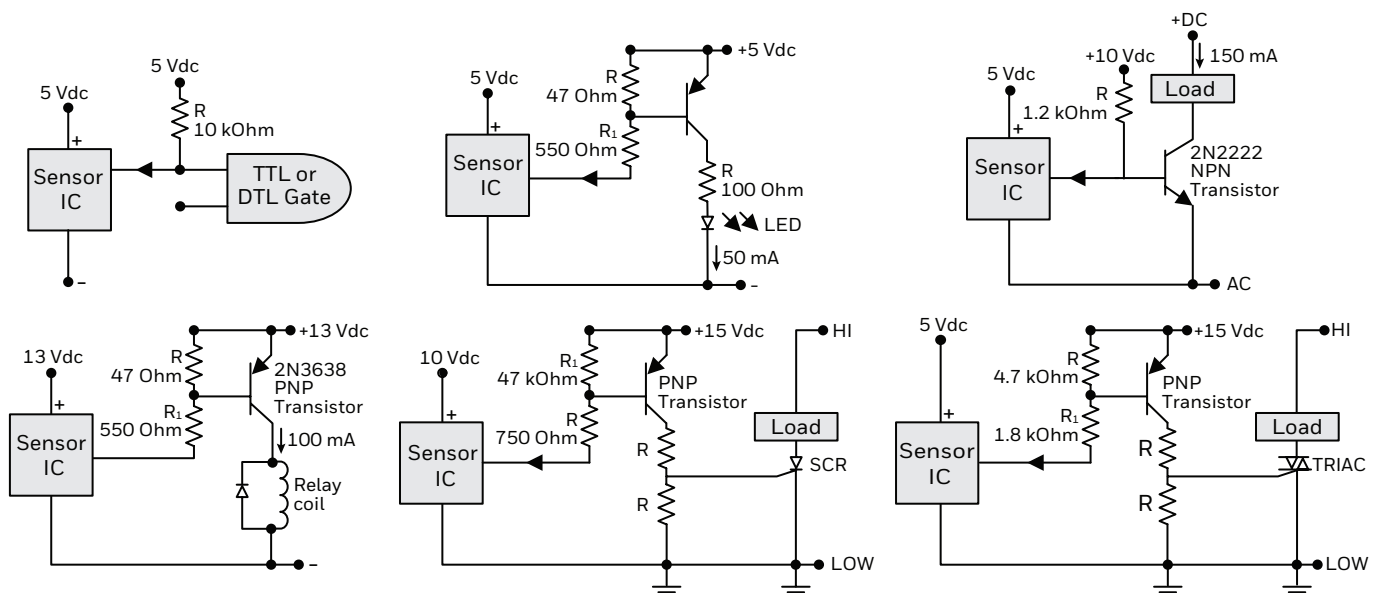

Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs:

SS400 Series, SS500 Series

Table 3. Magnetic Specifications


Temperature	Operating Characteristic	Magnetic Characteristic (Gauss)													
		Bipolar				Unipolar						Latching			
		SS411	SS511AT	SS413	SS513AT	SS441	SS541AT	SS443	SS543AT	SS449	SS549AT	SS461	SS561AT	SS466	SS566AT
-40°C [-40°F]	operate:														
	minimum	NS		NS		50		110		285		5	—	100	
	maximum	70		140		135		215		435		110	100	200	
	release:														
0°C [0°F]	minimum	-70		-140		20		80		210		-110	-100	-200	
	maximum	NS		NS		120		190		360		-5	-5	-100	
	differential (min.)	15		20		15		25		30		50	50	200	
25°C [77°F]	operate:														
	minimum	NS		NS		53		110		305		5		100	
	maximum	65		140		117		190		400		90		185	
	release:														
85°C [185°F]	minimum	-65		-140		20		80		230		-90		-185	
	maximum	NS		NS		99		165		325		-5		-100	
	differential (min.)	15		20		15		25		30		50		200	
125°C [257°F]	operate:														
	minimum	NS		NS		45		90		290	—	10		95	
	maximum	60		140		120		180		400	400	85		180	
	release:														
150°C [302°F]	minimum	-60		-140		15		70		215	315	-85		-180	
	maximum	NS		NS		105		165		325	—	-10		-95	
	differential (min.)	12		20		15		15		30	30	50		190	
125°C [257°F]	operate:														
	minimum	NS		NS		40		80		270	290	5		80	
	maximum	65		140		123		190		410	400	100		180	
	release:														
150°C [302°F]	minimum	-65		-140		15		60		200	215	-100		-180	
	maximum	NS		NS		115		180		340	325	-5		-80	
	differential (min.)	12		20		8		10		30	30	50		160	
150°C [302°F]	operate:														
	minimum	NS		NS		35		65		260		5		70	
	maximum	70		140		125		200		420		110		185	
	release:														
150°C [302°F]	minimum	-70		-140		10		55		185		-110		-185	
	maximum	NS		NS		120		195		345		-5		-70	
	differential (min.)	10		20		5		5		30		50		140	

Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs:


SS400 Series, SS500 Series

Figure 4. Operate and Release Point Performance Graphics


SS411/SS511AT

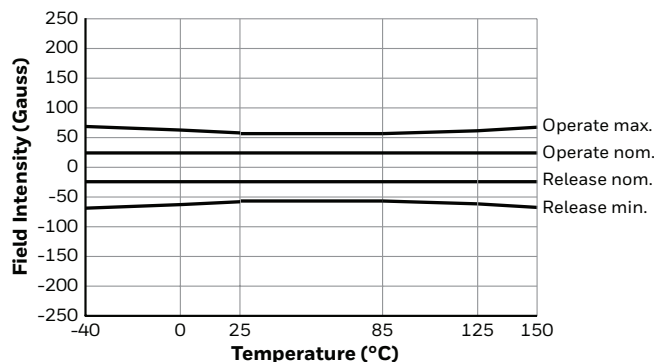


SS413/SS513AT

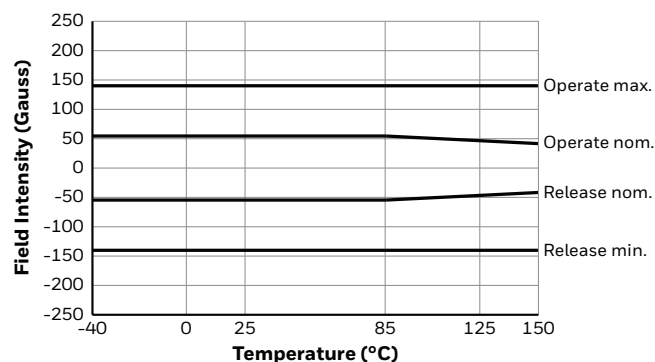


SS441/SS541AT

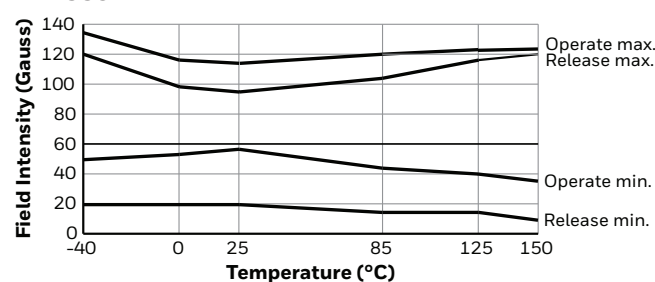


SS443/SS543AT

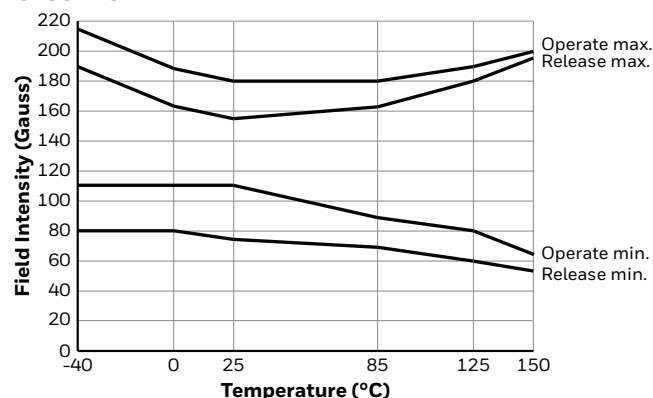


SS449/SS549AT

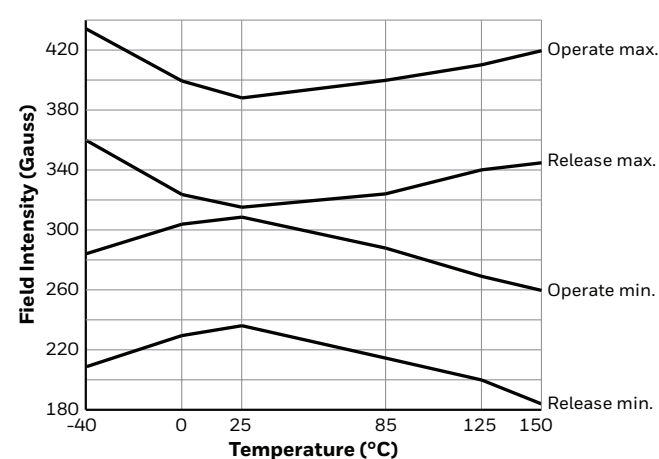

SS461/SS561AT

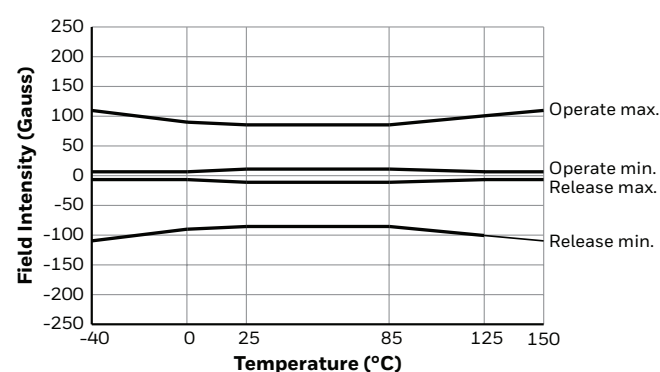


SS466/SS566AT

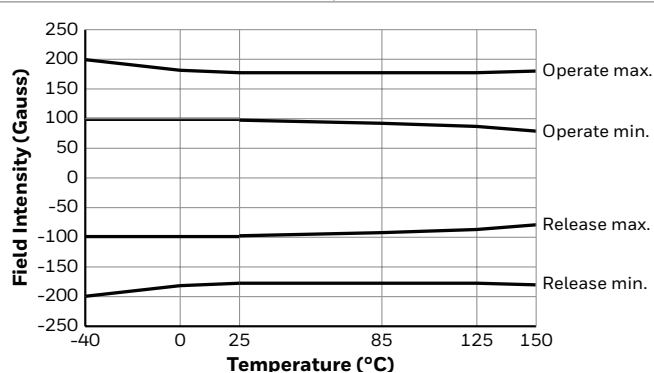

SS400 Series, SS500 Series

SS4XX: Straight Standard Leads, Bulk Pack

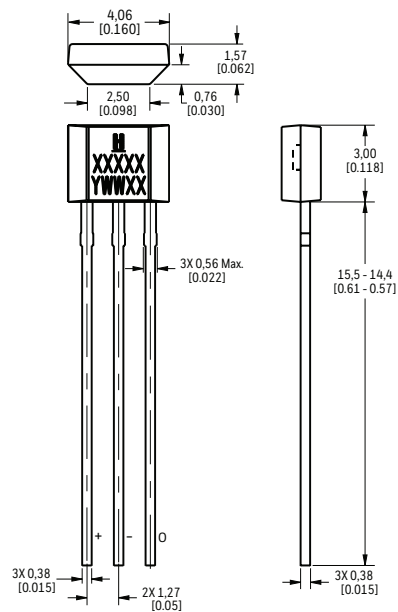

Technical drawing of the 3000 Series LED strip light, showing dimensions in inches [millimeters].

Top View:


- Overall width: 4.06 [0.160]
- Width of the central section: 2.50 [0.098]
- Height of the central section: 1.57 [0.062]
- Height of the side section: 0.76 [0.030]

Front View:

- Height of the top section: 3.00 [0.118]
- Height of the bottom section: 15.5 - 14.4 [0.61 - 0.57]
- Width of the bottom section: 3X 0.38 [0.015]
- Width of the central section: 2X 3.35 [0.13]
- Width of the side section: 0.56 Max. [0.022]
- Width of the bottom section: 2X 2.54 [0.10]
- Width of the bottom section: 3X 0.38 [0.015]

Side View:


- Width of the bottom section: 3X 0.38 [0.015]

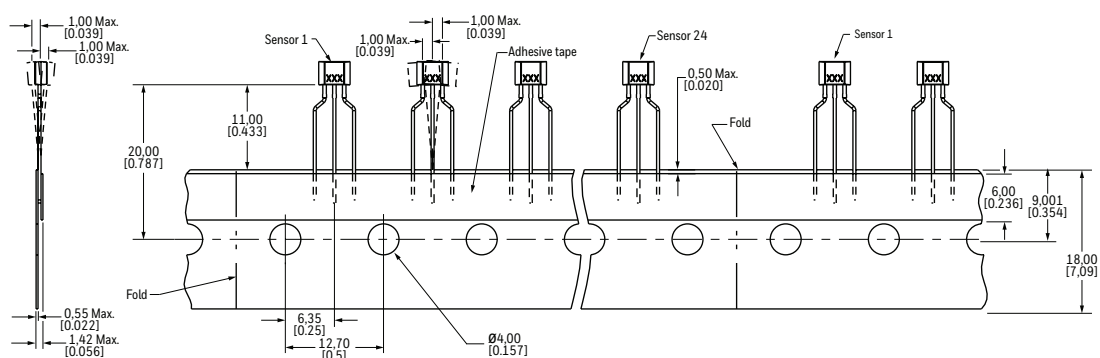

Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs: SS400 Series, SS500 Series


Figure 5. SS400 Series Flat TO-92-Style Mounting and Dimensional Drawings (For reference only: mm/[in].)

SS4XX-T3: Straight Standard Leads, Ammopack Tape-in-Box

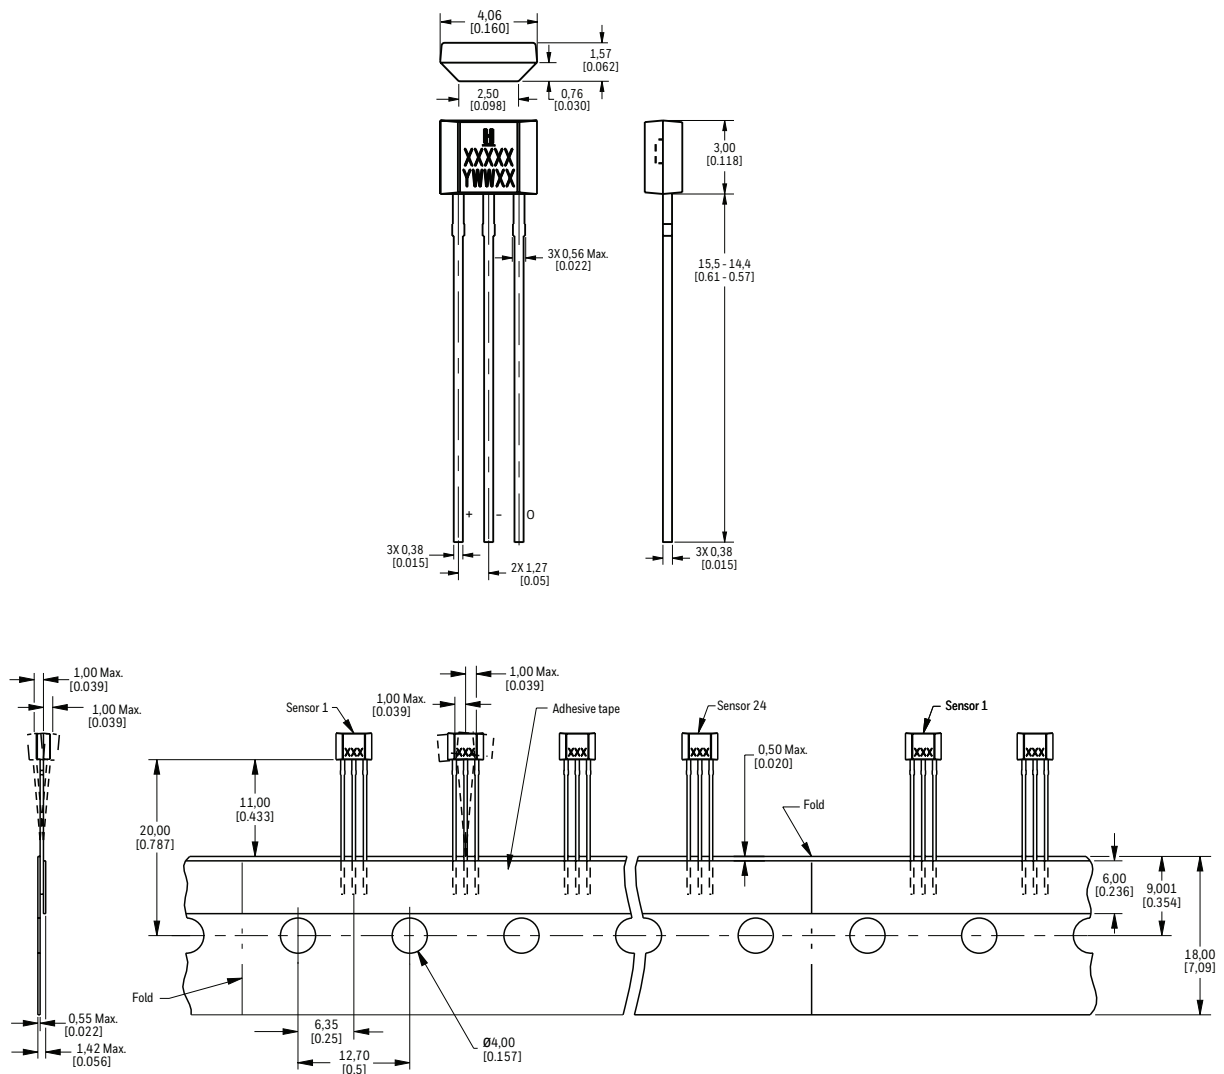


SS400 Series, SS500 Series

SS4XX-S: Surface Mount, Bulk Pack

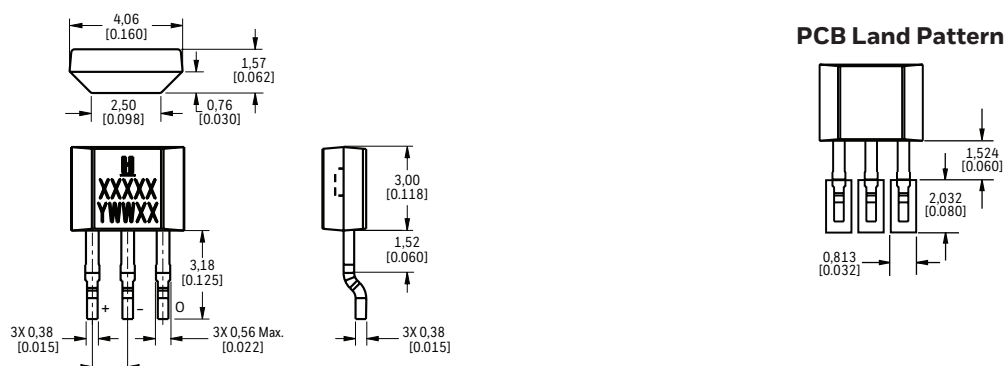

SS4XX-SP: Surface Mount, Pocket Tape and Reel

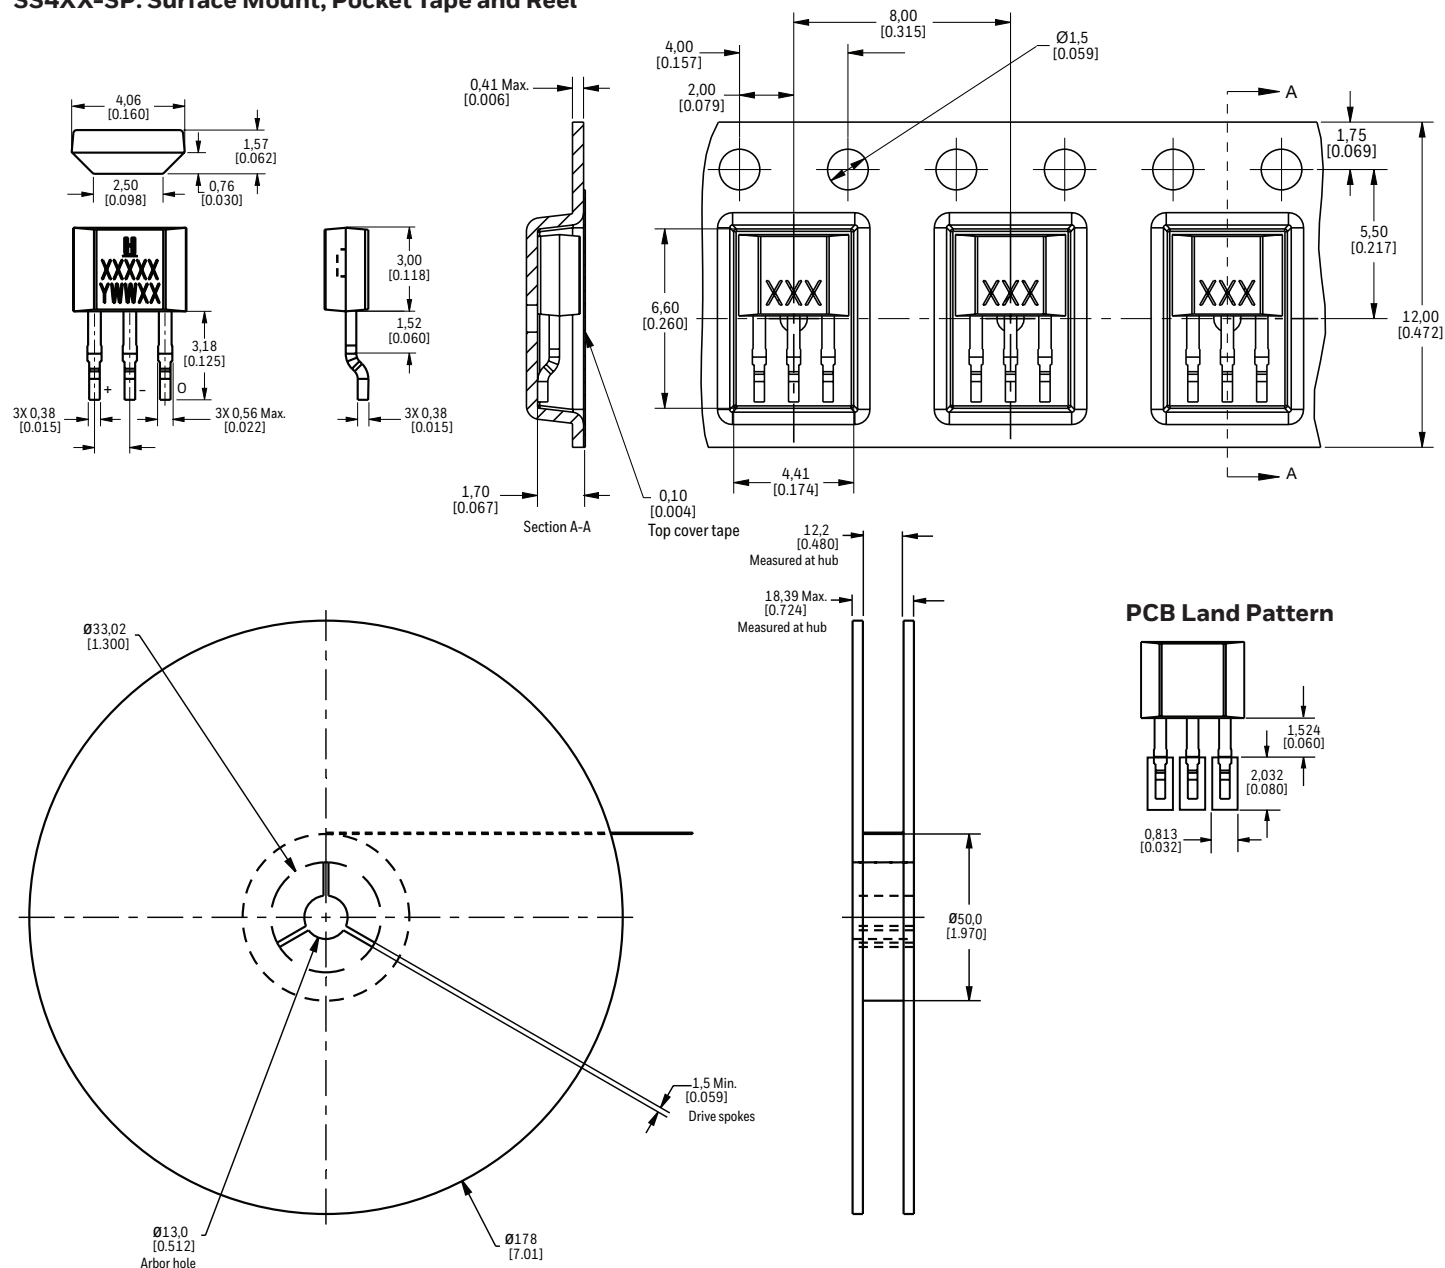


Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs:

SS400 Series, SS500 Series

Figure 6. SS500 Series Mounting and Dimensional Drawings (For reference only: mm/[in].)

SOT-89B Sensor IC, Pocket Tape and Reel

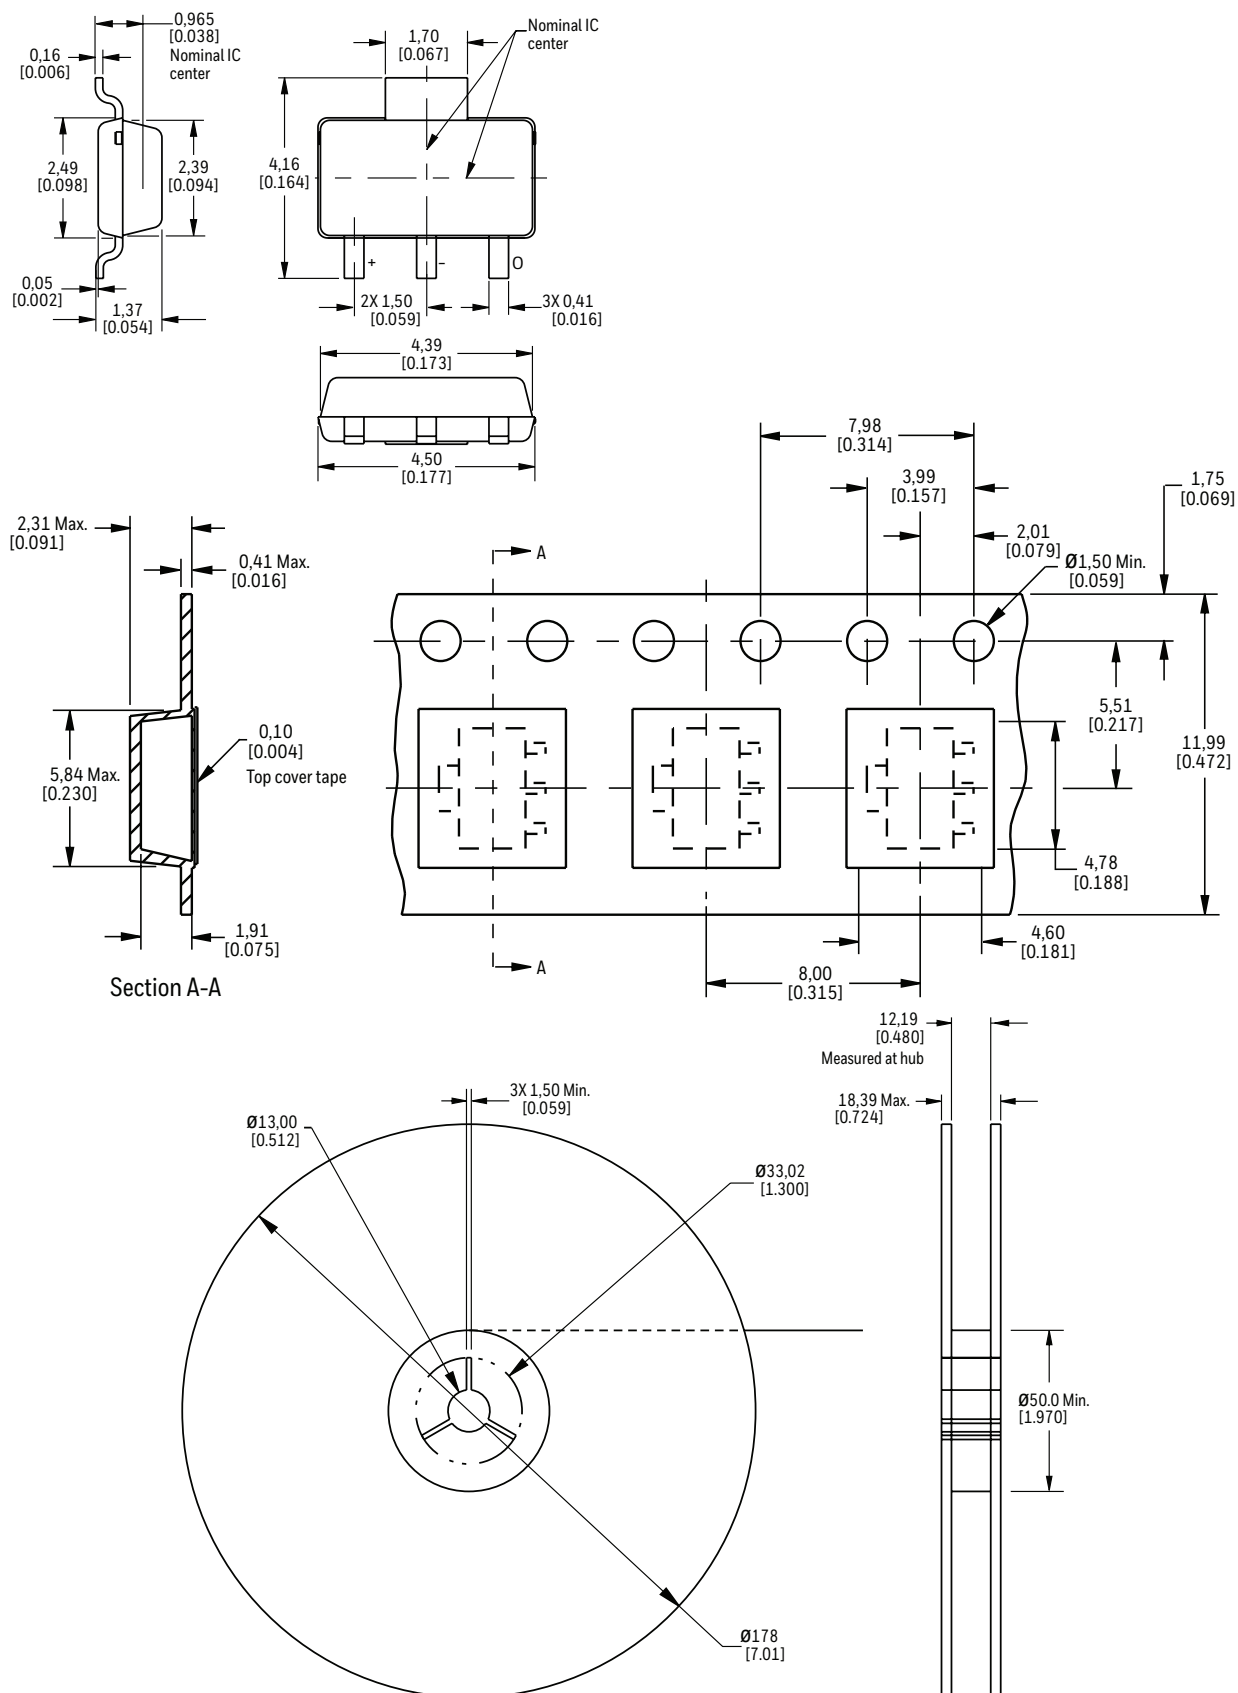

Bipolar, Latching, or Unipolar Hall-effect Digital Sensor ICs:

SS400 Series, SS500 Series

Table 4. Order Guide for the SS400 Series (Flat TO-92-Style)

Catalog Listing	Description	
SS4XX: Straight standard leads, bulk pack, 1000 units/bag		
SS411A	Bipolar	
SS413A	Bipolar	
SS441A	Unipolar	
SS443A	Unipolar	
SS449A	Unipolar	
SS461A	Latching	
SS466A	Latching	
SS4XX-L: Straight long leads, bulk pack, 1000 units/bag		
SS411A-L	Bipolar	
SS413A-L	Bipolar	
SS441A-L	Unipolar	
SS443A-L	Unipolar	
SS449A-L	Unipolar	
SS461A-L	Latching	
SS4XX-T2: Formed leads, ammpack tape-in-box, 5000 units/box		
SS413A-T2	Bipolar	
SS441A-T2	Unipolar	
SS443A-T2	Unipolar	
SS449A-T2	Unipolar	
SS461A-T2	Latching	
SS4XX-T3: Straight standard leads, ammpack tape-in-box, 5000 units/box		
SS411A-T3	Bipolar	
SS413A-T3	Bipolar	
SS441A-T3	Unipolar	
SS443A-T3	Unipolar	
SS449A-T3	Unipolar	
SS461A-T3	Latching	
SS4XX-S: Surface mount, pocket tape and reel, bulk pack, 1000 units/bag		
SS411A-S	Bipolar	
SS413A-S	Bipolar	
SS441A-S	Unipolar	
SS443A-S	Unipolar	
SS449A-S	Unipolar	
SS461A-S	Latching	
SS4XX-SP: Surface mount, pocket tape and reel, 1000 units/reel		
SS411A-SP	Bipolar	
SS413A-SP	Bipolar	
SS441A-SP	Unipolar	
SS443A-SP	Unipolar	
SS449A-SP	Unipolar	
SS461A-SP	Latching	

SS4XX




SS4XX-L



SS4XX-T2



SS4XX-T3

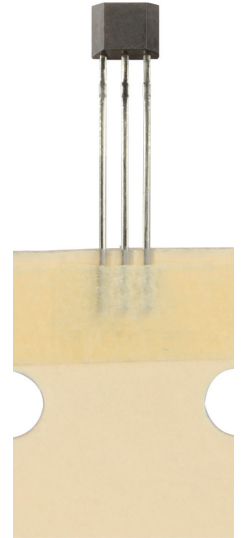

SS4XX-S



SS4XX-SP

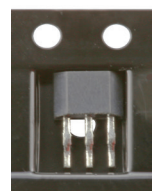


Table 5. Order Guide for the SS500 Series (SOT-89B, Pocket Tape and Reel, 1000 Units/Reel)

Catalog Listing	Description	
SS511AT	Bipolar	
SS513AT	Bipolar	
SS541AT	Unipolar	
SS543AT	Unipolar	
SS549AT	Unipolar	
SS561AT	Latching	
SS566AT	Latching	

